

FOLDING SIZE: 62*219mm

Four fold folding


**100g double-copper paper with matte oiled surface 4C double-sided
printing organ folds**

PRODUCT INTRODUCTION


It's a 4K Wireless Screen-sharing Pod – an all-in-one solution designed to simplify your meetings. It allows you to effortlessly connect your laptop to the speakerphone using a single cable. Enjoy 4K wireless screen-sharing, access to conference camera streaming in 1080P, and the convenience of plug-and-play functionality without the need for software or drivers.

Connect streamlines your conferencing experience, eliminates cable clutter, and ensures secure and efficient collaboration.

WHAT'S IN THE BOX

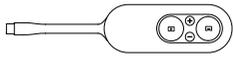

CP20

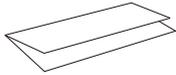

Quick Start Guide

As a 4K wireless screen-sharing pod, CP20 can be perfectly integrated with the CA200/CA400 to enable multi-transmitter screen-sharing scenarios, supporting up to four transmitters connected simultaneously with seamless switching.

HOW TO START

1. Connect the Device

- Please ensure the receiver hub RC10 in the CA200/CA400 is powered on.
- Method 1: Insert the CP20 screen-sharing pod into the USB-A port of RC10 using the pairing converter. Wait for 5 seconds. When "Successful" appears on the display, the pairing is complete.




Display


- Method 2: Insert the CP20 into the laptop you want to share the screen from. Press and hold both the screen-sharing button and the freeze screen button of the CP20 for 5 seconds and release simultaneously to automatically enter pairing mode.

2. Start Screen-sharing


- Connect the Screen-sharing Pod CP20 to a full-featured USB-C port on your laptop.
- Wait until the screen-sharing button light turns green, then press the button to start sharing your screen. Press the button again to end screen-sharing.

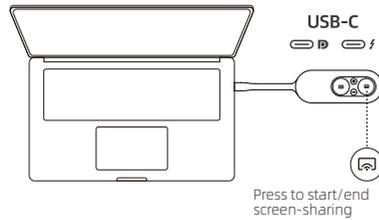

* In the case where the laptop's USB-C port does not meet the full feature requirement, use the USB-C to HDMI & USB-A adapter instead.

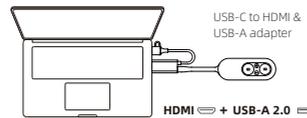

* Use the USB 3.0 extension cable if the laptop's USB 3.0 port is not nearby the HDMI port.

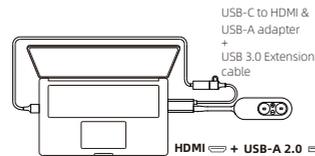

Note: The USB-C to HDMI & USB-A adapter and USB 3.0 extension cable are not included and must be purchased separately.

- To use the CP20 and access the camera wirelessly, in your video conference software, select "CP20 Audio Device" as your microphone, speaker, and select "CP20 Wireless Camera" as your camera.



Note: CP20 supports voice and video features only when RC10 is connected to a display device that supports both, or when a UAC/UVC voice-enabled camera is connected to RC10 via USB.

SPECIFICATIONS

Wi-Fi

| | |
|--|--|
| Protocol | 802.11 a/n/ac |
| Wireless Transmission Protocol | Quick UDP Internet Connections |
| Transmission Distance | Up to 10M |
| Frequency bands and the maximum transmitted power (Wi-Fi 2.4&5GHz) For EU) | 2422-2462 MHz, Max 16.96dBm; 5180-5230 MHz, Max 19.39 dBm; 5190-5230 MHz, Max 21.69 dBm; 5745-5825 MHz, Max 13.47 dBm; 5755-5795 MHz, Max 13.63 dBm; |


Screen-sharing

| | |
|-------------------------------|------------------|
| Max. Screen Output Resolution | 3840x2160 @30FPS |
| Average Latency | 150ms |

Others

| | |
|--------------------|--------------------------------------|
| I/O Interface | Type C PD + DP ALT |
| Operating System | Win 10/ 11; Mac 10.8 and Later |
| Product Dimensions | 190 x 40 x 18mm/ 7.5 x 1.6 x 0.7" |
| Product Weights | 69.2g /2.23oz |
| Package Contents | CP20; Quick Start Guide |

HOW TO USE

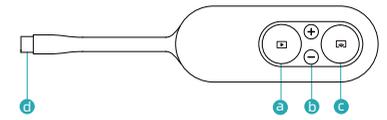

Top



Front

- Freeze Screen**
Press to pause/resume screen-sharing
- Speaker Volume**
- Screen-sharing**
Press to start/end screen-sharing
- USB-C cable to laptop**
For power supply and signal transmission

| | |
|----------------|--|
| Flashing Green | Connecting in progress. |
| Static Green | Connection succeed, ready for screen-sharing. |
| Static Yellow | No DP signal from the laptop port. |
| Static Red | Connection failed: 1. Freeze screen button turns red: screen-sharing is frozen. 2. Screen-sharing button turns red: connection failed. (1) Re-plug the CP20. (2) The screen-sharing software of the all-in-one machine is not started, restart the software and make sure the software version is 3.0 or above. (3) CP20 is not paired with the screen casting software, insert CP20 into the MFP for re-pairing. |

REGULATORY AND SERVICE INFORMATION

The products documented in this guide include aspects which are protected under their respective patent, copyright, design copyright, registered design and trademark laws. All other trademarks remain the property of their respective owners. This guide is distributed online. It may only be reproduced for use within the institution in which the product is used. For use outside of your institution, no part of this guide may be reproduced, transmitted, stored in a retrieval system or translated into any other language without the prior permission of our company. Please note that the content in this guide is protected under copyright law. Although every care has been taken in the compilation of this guide, our company accepts no responsibility for errors or omissions, or for damages resulting from the use of information contained within this guide.

Compliance

Europe

We declare under our Sole responsibility that the Connect conforms to the essential requirements of European Union Directives 2014/53/EU Radio Equipment Directive (RED), 2014/30/EU Electromagnetic Compatibility Directive, 2014/35/EU Low Voltage Directive and 2011/65/EU Restriction of Hazardous Substances in Electrical and Electronic Equipment.



These devices comply with RF specifications when the device is used at 20 cm from your body



This device is restricted to indoor use when operating in the 5150-5350MHz frequency range in all EU/EFTA member states and Turkey.

United Kingdom

We declare under our sole responsibility that it conforms to the essential UKCA requirements: The Radio Equipment Regulation 2017 (UK S.I. 2017 No. 1206) and The Restriction of the Use of Certain Hazardous Substances in Electrical and Electronic Equipment (UK S.I. 2012 No. 3032) .



Waste Electrical and Electronic Equipment (WEEE)
For more information concerning the correct disposal of these products, please contact your reseller.

FAQ

Q: What's with it when yellow screen-sharing indicator light on CP20?

Make sure whether the computer connected supports DisplayPort (DP output).

Q: What's with it when red screen-sharing indicator light on CP20?

Power off and on the CP20 Or try pairing again.

Q: Screencast button doesn't work but indicators on CP20 are normal?

Check if the all-in-one machine is matched with CP20. If there is no connection, repair it.

Q: Why does my computer fail to screen-sharing at 4K?

1. Check the resolution setting of your computer.
2. Check the computer casting mode. Some computers can only support 4K screen-sharing in the Extend mode.

Q: Why does the sound not come out from transmitting device?

Make sure the CP20 is selected as the microphone and speaker.


Q: How to address echo issues at the other end during meeting?

Choose CP20 as your microphone/speaker to activate Echo Cancellation.

Q: Why does the camera not work when plugged into IFPD?

Camera functionality may vary due to compatibility issues. Recommended to use a suggested camera if you are experiencing lagging or failed recognition.

1. Ensure that the all-in-one machine is equipped with a camera and set it as the default camera.
2. Unplug/plug the CP20, and try after rebooting the system.
3. Check if the power supply exceeds specification, use adapter if it's the case.

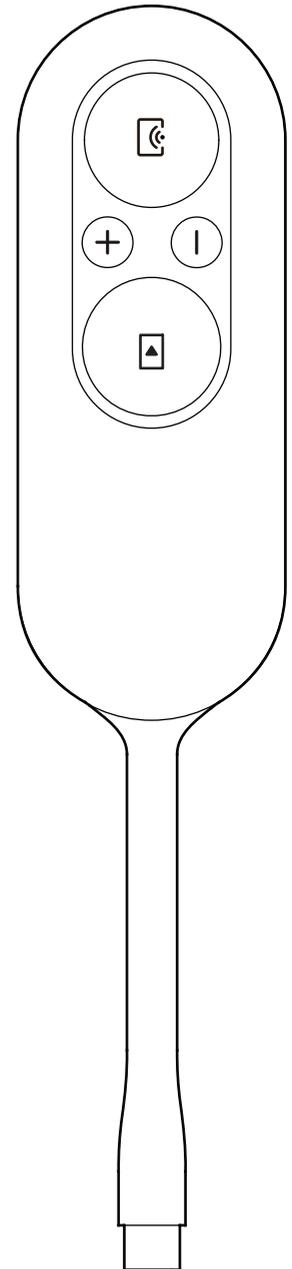

4K Wireless Screen-sharing Pod Quick Start Guide